 


Book Scanner Quick Instruction

1

Package Content

 
☐ Book Scanner

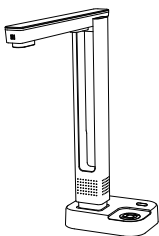


☐ USB Cable




☐ Quick Instruction

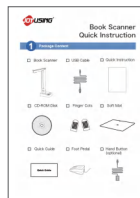

☐ Soft Mat

 


☐ Finger Cots

 

☐ Foot Pedal



 ☐ Quick Guide




☐ CD-ROM Disk
(optional)




☐ Hand Button
(optional)



 ► Product Preview

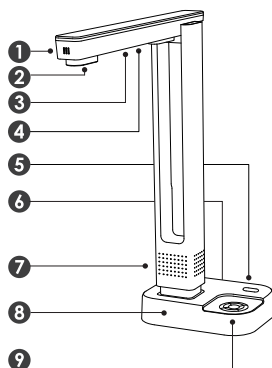


- | | |
|--|-----------------------------|
| 1. Microphone
(Optional) | 5. A3/A4 Indicator
Light |
| 2. Lens (Single/Dual
Camera Optional) | 6. Ports |
| 3. LED Light | 7. Speaker(Optional) |
| 4. Laser(Optional) | 8. Weighted Base |
| | 9. Control Buttons |

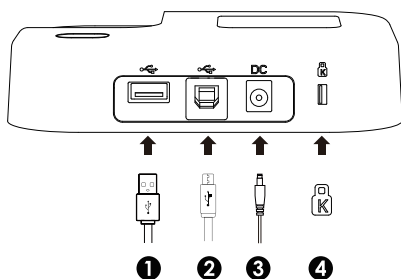 

1. USB Hub
2. USB TYPE-B
3. DC 5V/2A (Optional)
4. Kensington Lock

► USB to Computer

 Connect the USB cable to the PC and Document Scanner & Camera.

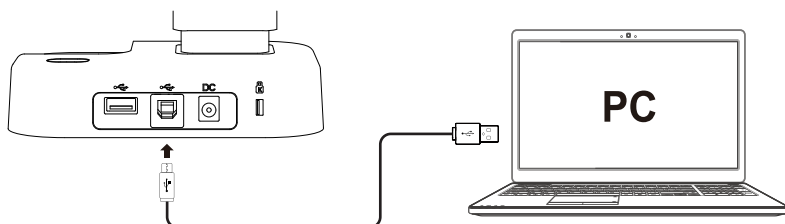

► Download Online

Link to our website or scan the QR code:

<https://www.joyusing.com/download-bookscanner.html>



Choose the software.



 
3

Attentions

1. Finger Press Area



Press the pages in this area.

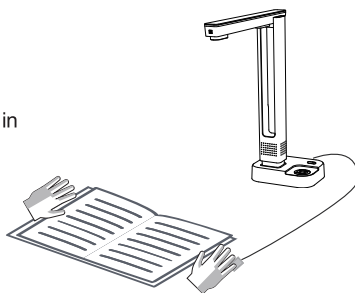

Before use:

- Do not leave it under direct sunlight or by heaters. It maybe discolored or damaged.
 - Do not place this product in any humid, dusty, or vibrating locations.
 - Carry the product by holding the base in both hands. Never hold the product by the arm or the camera head.
 - Use a soft, dry cloth for cleaning instead of any volatile solvent.
- When the device is not in use for a while, please turn off the power.

During use:

- Please prevent children from operating the device without supervision.
- Recommended environmental conditions: Temperature: 0°C - 40°C(32°F - 104°F).
- Humidity: 30% - 85%(No condensation).
- Use the product on a stable base, desk, or table.
- Do not press or pull the camera head with force.
- Do not point the camera lens directly at the sunlight. It may be damaged and fails to image.
- Do not look directly to the LED or lasers to prevent your eyes from being damaged.
- The product may not be operated properly if a USB hub is used to connect the product and a PC.
- Be careful to prevent the unit from dropping or overturning
- Please prevent the camera head to hit the desk top or any other hard objects, or it can be damaged easily.

4

Warranty Card

Model _____

Add _____

Tel _____

E-mail _____

Date _____

Certification

Model _____

Insrptor No. _____

Production date _____

Manufacturer _____